EZ POCKETDOOR INSTALLATION

PARTS LIST




1/4 - 20x3/4"
Hex Bolt
(x2)



Self Drilling
Screws
(x4)



Bracket
(x2)

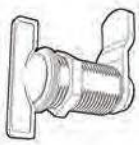


Cam Lock
(x1)




Pocket Door
(x1)

1 LOCATION OF DOOR


Locatewhich side of pocket to
install the door (asper drawing)

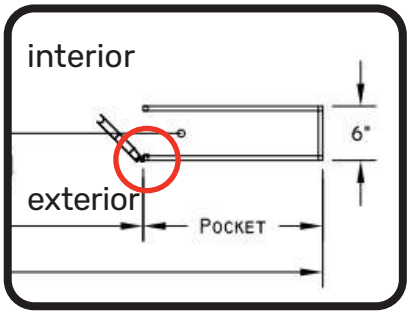

2 BRACKETINSTALLATION

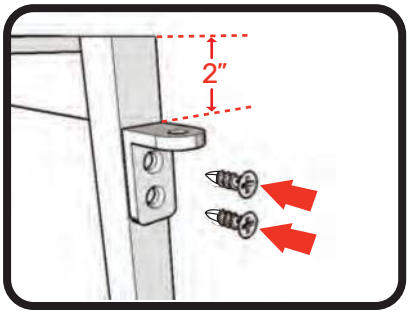


Fastenbracket 2"from the top
with selfdrilling screws
(provided)

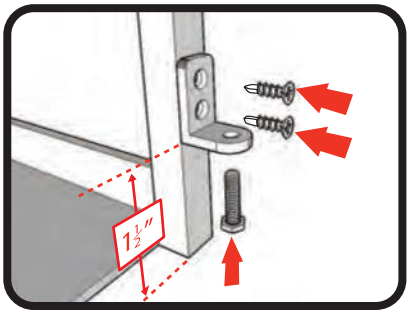


Fastenbracket11/2" from the
bottom
with selfdrilling screws(provided)
then insert hex bolt (provided).

3 DOORINSTALLATION

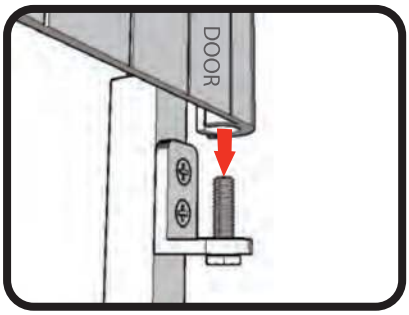


Lowerbottom of door onto the
hex-bolt.

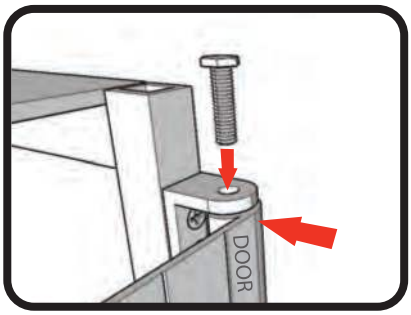


Align top of door with bracket
and insert hex-bolt (provided).

EZ POCKETDOOR INSTALLATION


4 CAM LOCKINSTALLATION

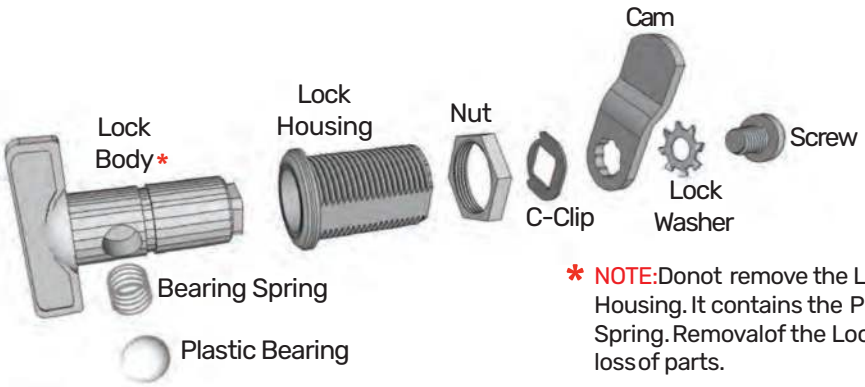


* NOTE:Donot remove the Lock Body from the Lock Housing. It contains the Plastic Bearing and Bearing Spring. Removalof the Lock Body could result in the lossof parts.

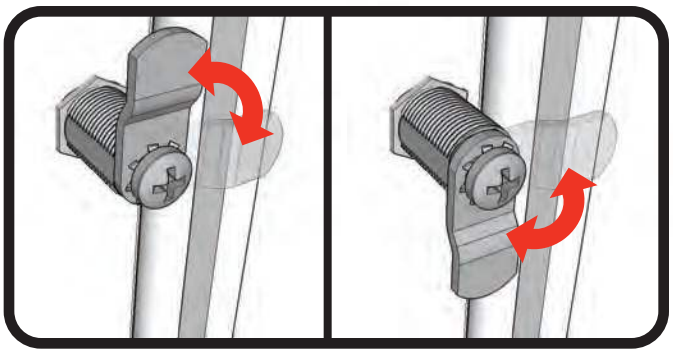


Cammust engage pocket frame to operate properly. Verify cam orientation prior to install.

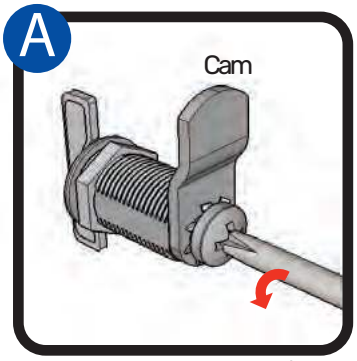

Loosen screw a 1/4 turn to loosen cam.

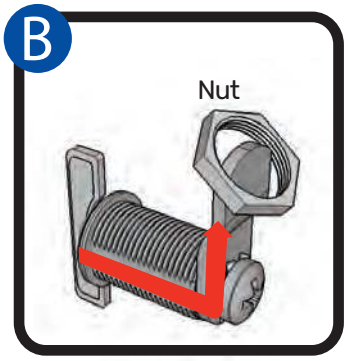


Removenut.

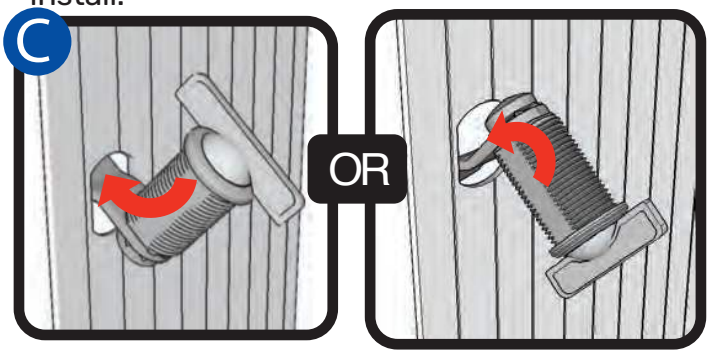


Insert cam lock.

Camlock alternate installation.

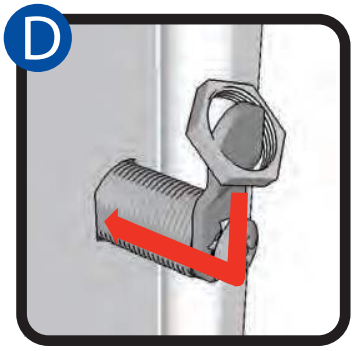


Placenut and tighten to secure cam lock to the door.

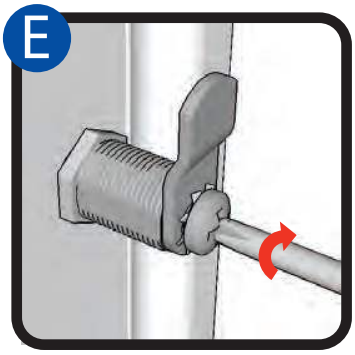


Tighten screw

CHANGING DIRECTION OF LOCK BODY ROTATION

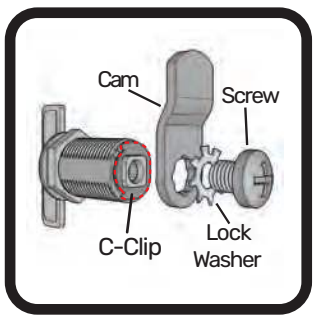

To accessC-clip, carefully remove Screw, Lock Washer and Cam.

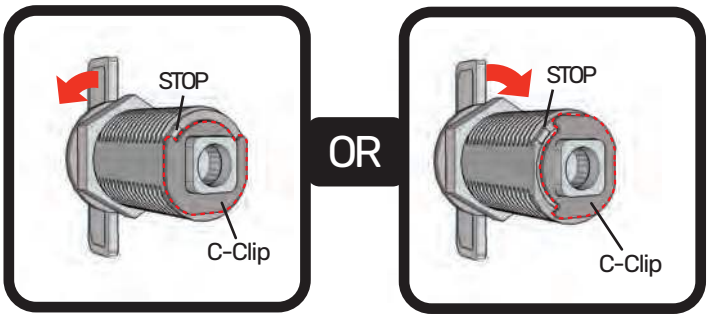

Placement of C-Clip and how it engages the stop will dictate which direction the mechanism will turn.

Once C-Clip is in position, replace Screw, Lock Washer and Cam.